

SMARTLIFT CONTROLLER GUIDE

The following sections can be used after power has been applied to the light lift and the controller is plugged into the controller wire. Turn off light switch to chandelier.

CEILING POSITION: The light lift will automatically shut itself off at the ceiling. All of the SmartLift Controller's functions are relative to the CEILING POSITION.

DOWN POSITION: User has the option of programming a DOWN POSITION into the SmartLift Controller. The DOWN POSITION is where the light lift will automatically shut off at the desired chandelier maintenance elevation. Programming the SmartLift Controller allows the user freedom from holding the buttons during operation.

TURN ON THE CONTROLLER:

1. Turn on the Controller by inserting key into keylock and rotating to the 3 o'clock (ON) position. The Controller will beep and the **READY** light will turn green.

PROGRAM THE DOWN POSITION:

The light lift must be at the CEILING POSITION to start the programming process. Only program the controller after the chandelier is installed and the final chain length is determined.

1. Turn on the controller if needed.
2. Press and hold **UP** until the light lift is at the CEILING POSITION, then release.
3. Press and hold **DOWN** until the chandelier reaches the desired DOWN POSITION, then release.
4. Press and release **SET** then press and release **DOWN**. The DOWN POSITION is programmed when the controller beeps.
5. Press and release **AUTO** then press and release **UP** to run the light lift back to the CEILING POSITION.

NORMAL OPERATION:

Once the SmartLift Controller is programmed, perform the following for operation:

1. Turn on the controller if needed.
 2. Press and release **AUTO** then press and release **DOWN** to run the light lift to the DOWN POSITION.
 3. Press and release **AUTO** then press and release **UP** to run the light lift to the CEILING POSITION.
- To stop the light lift from lowering at any time, press and release **UP**. To stop the light lift from raising at any time, press and release **DOWN**.

UNPROGRAMMED OPERATION:

If you choose not to program your SmartLift Controller, perform the following for operation:

1. Turn on the controller if needed.
 2. Press and hold **DOWN** to run the light lift down.
 3. Press and hold **UP** to run the light lift up.
- Release **UP** or **DOWN** to stop running the light lift at any time.

CLEAR THE DOWN POSITION:

1. Turn on the controller if needed.
2. Press and hold **SET**.
3. While holding **SET**, press and hold **DOWN**.
4. When the **DOWN** light flashes, release both buttons.
5. Press and release **DOWN**. The DOWN POSITION is cleared when the controller beeps.

TURN OFF THE CONTROLLER:

1. Rotate key from 3 o'clock (ON) position to 12 o'clock (OFF) position.
2. Remove key from keylock and store in a safe and secure location.

Never leave Controller (ON) when not in use.

See **SAFETY WARNINGS** on flip side

See **KEYSWITCH CONTROLLER GUIDE** on flip side