


# WIRELESS CONTROLLER GUIDE

Follow the steps below to insure proper installation/operation of your Wireless Controller.

**NOTE: The lift must have power to complete this process.**

**\*\*\*Make sure to turn off light switch to chandelier\*\*\***


**Step 1.** Sync the Wireless Controller and RF transmitter. Hold both buttons on the remote to get a solid yellow light on the transmitter. This confirms power and RF connectivity.

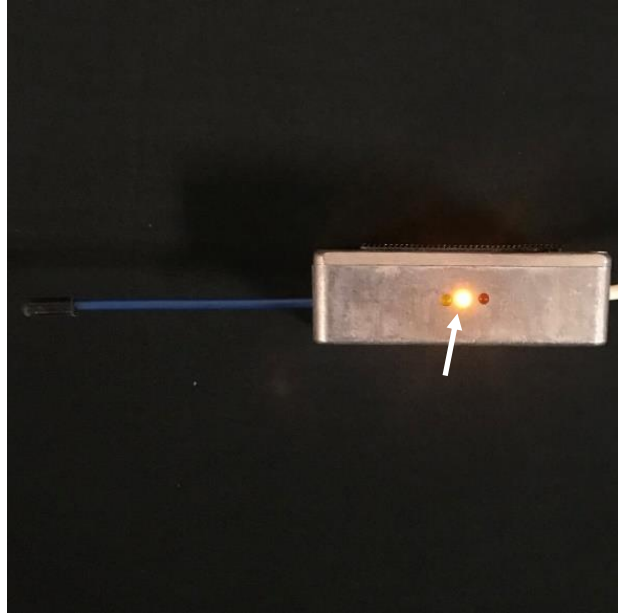


**Step 2.** Mount the RF transmitter under the baseplate with the supplied Velcro.

- The antenna must be horizontal (not vertical).
- Antenna should point away from the motor.
- **NOTE: Every jobsite is different. If you have connectivity issues, feel free to try other antenna positions.**
- The optimal position under the base plate is as follows.

200/300 lbs. Lifts

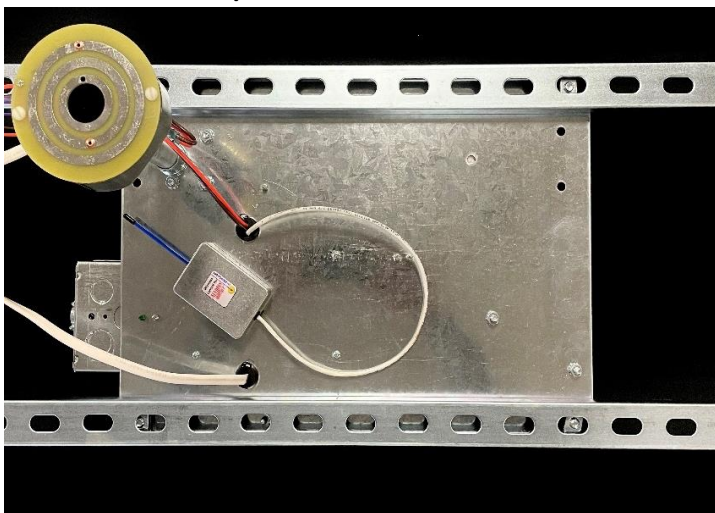

700/1000 lbs. Lifts

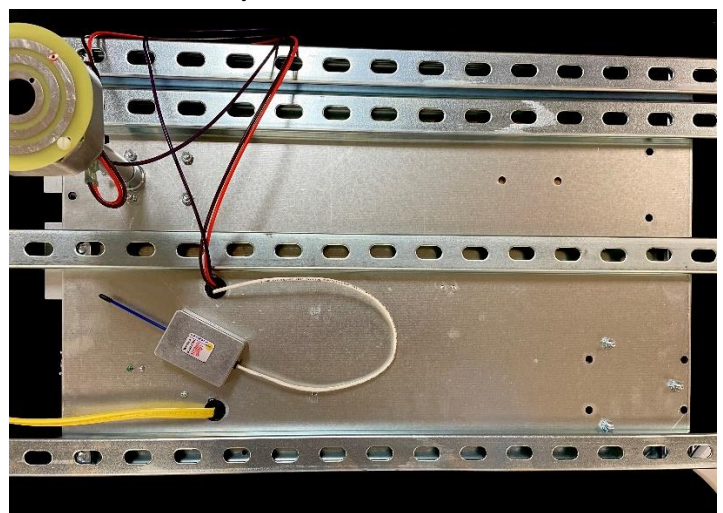

**Step 3.** Unlock your Wireless Controller. The handheld remote is equipped with a child safety lock that will time out after 30 seconds of inactivity.

- Press both buttons and wait for steady indicator light (flashing light indicates low battery)
- Press DOWN – watch for short flash.
- Press DOWN again – short flash.
- Press UP – steady light = unlocked



#### **Step 4.** Normal Operation

- CEILING POSITION: The light lift will automatically shut itself off at the ceiling. The chandelier only lights in the CEILING POSITION

- DOWN POSITION: User controls the DOWN POSITION. The DOWN POSITION is the desired elevation for chandelier maintenance.

- Hold the DOWN button to operate the light lift DOWN.
  - Release the DOWN button to stop the lift in the DOWN POSITION
- Hold the UP button to operate the light lift UP.
  - The lift will stop automatically in the CEILING POSITION.
- Anytime a button is released the light lift will stop.
- Press both buttons simultaneously to turn off controller.

#### **Safety Warnings:**

- **Call Aladdin Light Lift immediately if the light lift operates down while holding the UP button or up while holding the DOWN button. A safety hazard can occur and cause the chandelier to fall, which could cause death, personal injury and/or property damage.**
- **Never operate the Aladdin Light Lift without tension on the cable.**
- **Never remove or tamper with the cable safety device. Never install an Aladdin Light Lift if cable safety device is removed or tampered with. The cable safety device consists of a limit switch and small gauge rectangular wire. It is located directly in front of the winch drum. Removing or tampering with the cable safety device could cause the cable to reverse wrap on the winch drum and could also cause the cable to unravel off the winch drum and get damaged.**
- **Never install or operate an Aladdin Light Lift that has a frayed, kinked, or otherwise damaged cable.**
- **Never operate the Aladdin Light Lift without first removing the paper tape from the winch drum.**
- **Avoiding any of these could cause the chandelier to fall, which could cause death, personal injury, and/or property damage.**